

Smart Remote Control Fishing Bait Boat

D18B GPS Version



Instruction Manual

Power On

- 1.1. Place the boat on a flat surface, turn on the power, make sure the 3 indicators are on before placing it on water. This is important.
 2. Turn on the power of the remote control, the green indicator light of the remote control is always on.
- Note: Do not place the boat on a slope or in the water before the boat light is on, and do not shake the boat.

Calibration

1. Put the boat onto the water and drive the boat 7 meters away from the shore to ensure that there are no obstacles in the surrounding area.
 2. Press OK+A button, (the boat enters auto-calibration status) the red light on the remote control flashes, the boat will first rotate one circle to the right, then one circle to the left, until it stops rotating and the calibration is complete.
- Note: Press the B key to exit the calibration.

Anchor point saves..

1. Only when the GPS icon is displayed on the remote control screen, the anchor point storage can be operated.
2. Press OK+anchor points (1234) button to store the location at any point, it stores up to 4 positioning points at a time. After the operation is successful, the screen will appear these corresponding points.
3. Long press the OK button to automatically clear all the anchor points.

Automatic return and cruise

1. Set an origin point before using the boat, it is recommended to set 4 points as the origins.
 2. Press any key of the points numbered 1-2-3-4 on the remote control, and the boat will automatically move to the designated anchor point.
 3. When boat is 1 meter away from the anchor point, the job is done, the distance will be displayed on the remote control screen, and this distance is from the anchor point to the boat.
- "When the boat is running on track or running in the wrong position, please re-calibrate.

Note: Press B to exit auto return mode.

Maintenance

Controller

Please remove the battery if not in use for a long time

Motor

Before using, please check whether the motor has entangled objects

Boat Body


1. Please wipe the moisture after use to keep the hull dry and clean
2. Please take out the battery and charge it when not in use for a long time
3. Do not store with corrosive liquids and objects
4. Do not bring the boat close to high temperature objects
5. When not using the boat, please put the boat in the matching bag to prevent dust.

Fast Charging


1. The hopper can be operated separately.
2. The night light is designed with a bright blue light.

Usage scope:

- a. It helps find the direction and position.
- b. It helps drop fishing baits and hooks.
- c. Can work a rescue boat for radio controlled yachts.
- d. Can be a toy for boys.

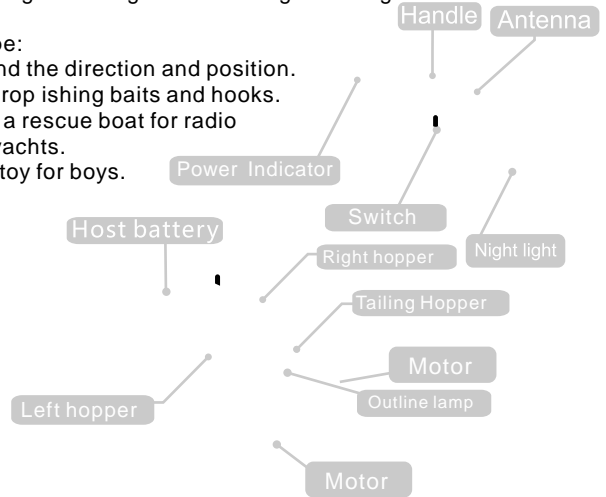

Scan to watch instruction on YouTube

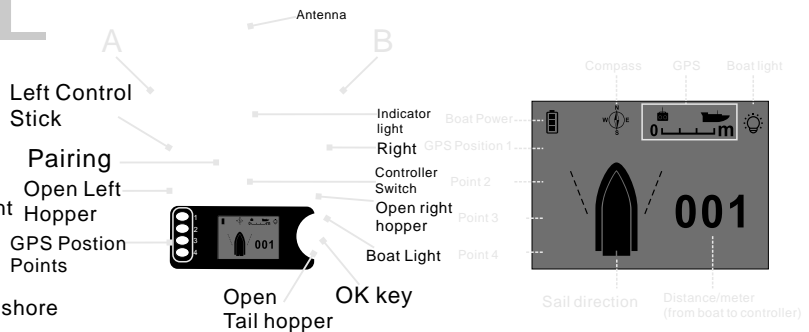

Auto Cruise Control

1. Push the left and right handles to the top,
 2. Press the B key to enter the cruise mode;
 3. The left and right handles can slightly adjust the direction of the boat.
- Remark: Press B button to exit cruise mode.

Boat Power Display

1. The LCD screen displays the power of the boat, and there are 4 levels in total. Charge or replace the battery when the battery icon at level 1.
2. When the battery icon starts to flash, this means low battery state, and the boat will automatically return to the origin (point 4);

Wireless Signal

1. When the boat's signal is poor, the remote controller will "di" prompt;
2. If the signal is poor for a long time, the ship will automatically return to the origin (point 4)

Automatically return after losing contact.

1. When the remote control is low in battery/auto shut down/manually shut down the remote control, the boat will automatically return to the original anchor points in about a minute.

Streamlined Boat Hull

Sail more smoothly

Stronger power against wind and waves

7.2V*5200mA high capacity battery

Charge faster Longer, battery life



Battery Usage and Charging

◆ Host battery (standard)

◆ Battery charging interface (standard: 1 set battery)

◆ Battery charger

